

## PREPARATION

Keep the following in mind:

- **Disclaimer:** Drill holes at your own risk
- Verify the location for the light to be installed
- Verify that there is enough clearance for the housing of the product to fit into the intended mounting location
- Utilize a hole saw bit to cut a 7.5" hole for the product to be installed properly

## WIRING

Determine the wiring configuration used on the product.

- 3 Wires – (2 Power / 1 Ground)



## FASTENING

The Cygnus light has 4 holes located on the bezel for mounting along with an adhesive backed foam gasket

1. Clean the mounting surface before installing the product
2. Peel the protective film off the adhesive found on the back side of the product bezel
3. Insert the light into the mounting hole – flush against the mounting surface and hold in place while installing #8 screws into all four-hole locations (**NOTE:** *mounting hardware not included due to varying applications*)

### **DISCONNECT POWER SOURCE (BATTERY) BEFORE STARTING ELECTRICAL WORK.**

#### **Recommended methods for splicing wires together (*parts not included in Vista product kits*):**

- Solder and cover bare wires with heat shrink or electrical tape.
- Insulation-displacement connector (IDC) / insulation-piercing contact (IPC).
- Twist on wire connector, "wire nut".
- Crimp connector, "Butt splice".

## **WARNING:**

1. Supply current and wattage must not exceed the rated values on the specification documents.
2. Incorrect polarity or improper wiring may cause personal injury and/or damage to the product. It is recommended that an electrical technician, professional, or similarly qualified individual finish wiring.
3. To avoid electrical shock risk, all failures should be examined by a qualified technician.
4. Environmental suitability, including but not limited to water resistance, varies based on product design. Unless explicitly noted, products are to be installed in a location shielded from outdoor elements. To avoid irreparable damage, refer to specification sheets to locate products in a proper environment.
5. Do not install products near an open flame or in high temperature environments unless the product is explicitly designed to function as such. Adversely, do not install products in excessively cold environments unless explicitly designed to function as such. Refer to product spec sheets/drawings for information about minimum and maximum operating temperatures.
6. Vista Manufacturing Inc. is not liable for any injuries or damage caused due to improper wiring or installation.



# INSTALLATION INSTRUCTIONS FOR CYGNUS LIGHTS

013019  
REV A