

IP67 RGBW RF Controller


Install Instructions

For Your Safety:

- Disconnect power source before starting electrical work
- Read all safety notes before installing the product
- Verify that the power supply complies to the voltage limits as shown in the PSG
- The products should not be stacked.
- Avoid installing the product within 6" of power supply.
- Do not install behind or within a metal object.

Precautions:

General Diagram

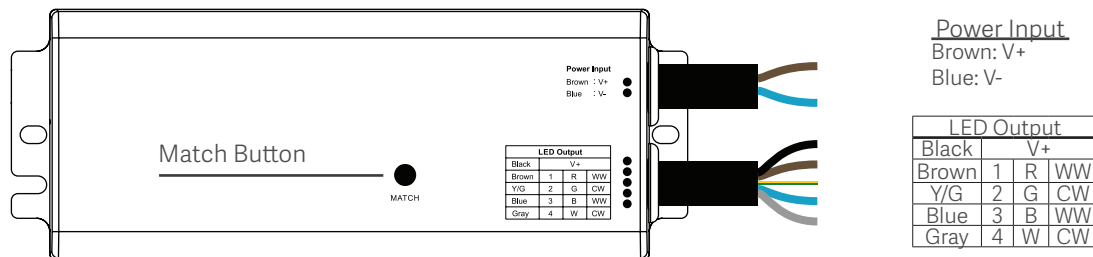

Match Remote Control

Use the Controller's Match Button

Match:

- Short press the Match button, immediately press ON/OFF button (for single zone remotes) or the Zone button (for multi-zone remotes) of the Remote. The LED will flash three times if the match is successful.

Delete:

- Press and hold Match button for 5 seconds to delete all matched remotes. The LED will flash three times if the matched remotes were deleted.

Match:

- Rapidly switch power to the Controller on and off two times.. Immediately short press the ON/OFF button (for single zone remotes) or the Zone button (for multi-zone remotes) 3 times on the remote. The light will blink 3 times if the match is successful.

Delete:

- Rapidly switch power to the Controller on and off two times. Immediately short press the ON/OFF button (for single zone remotes) or the Zone button (for multi-zone remotes) 5 times on the remote. The light will blink three times if the matched remotes were deleted.

Use Power Restart

Fade In and Fade Out Setting

- Long press the Match button for 5 seconds, then short press the match button 3 times. The light ON/OFF fade time will be set to 3 seconds and the indicator light will blink 3 times.
- Long press the Match button for 10 seconds to restore factory default settings. This will set the light ON/OFF fade time to 0.5 seconds.

RGB/RGBW Dynamic Mode List


1. RGB Jump
2. RGB Smooth
3. 6 Color Jump
4. 6 Color Smooth
5. Yellow Cyan Purple Smooth
6. RGB fade in and Out
7. Red fade in and out
8. Green fade in and out
9. Blue fade in and out
10. White fade in and out

Vista reserves the right to modify this specification without prior notice.



Wiring Diagram


Wiring for RGB/RGBW

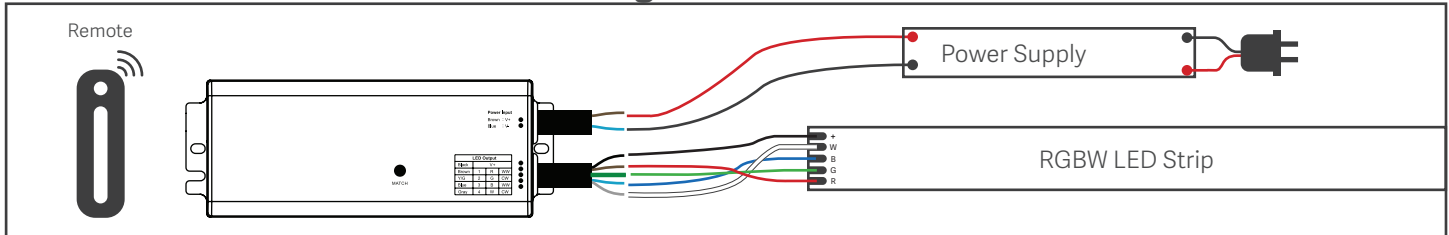


Switching to RGB Mode:

- By default, the controller is in RGBW Mode
- When using the controller with RGB Lights (the Grey wire is disconnected), an alternate control scheme is necessary to use White
 - Long press the Match button for 20 seconds. The light will flash multiple times during this process, keep the button held for the full 20 seconds to ensure that the controller is in the correct mode.
 - The light will flash 5 times when the controller has successfully entered RGB Mode.
 - Pair the controller with a remote by short-pressing the Match button and immediately pressing the Power or Zone button on your remote.
- To revert the controller back to RGBW Mode, long press the Match button for 10 seconds and pair your remote again, following the instructions above.

Wiring for Dual-Color

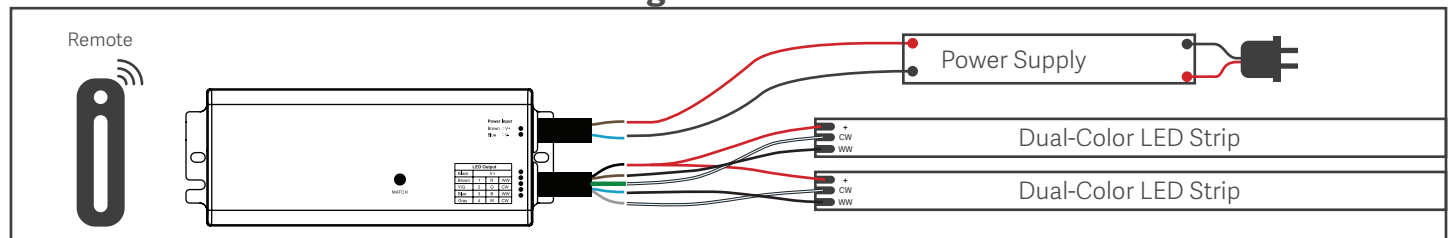

Wiring for Single Color

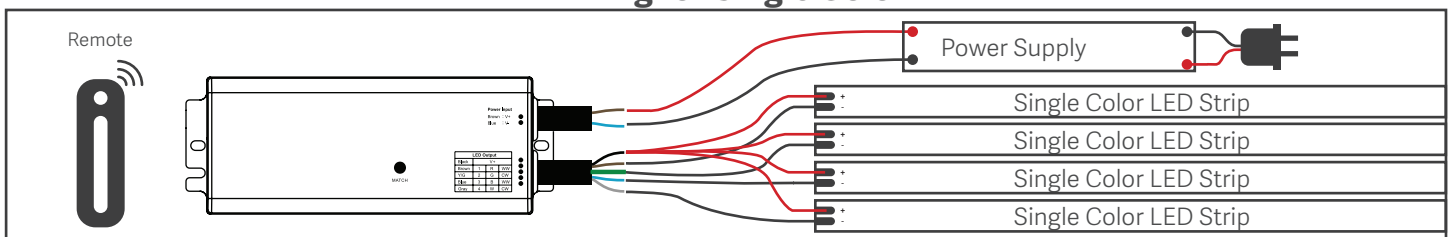

Vista reserves the right to modify this specification without prior notice.