

013088 **Vista Mfg., Inc.** 2505 Columbia Dr Elkhart, IN 46514

1-Zone Slim RF Remote

Install Instructions


For Your Safety:

- Disconnect power source before starting electrical work
- Read all safety notes before installing the product
- When installing or replacing battery, install in the correct orientation

Precautions:

- If the remote will not be used for a long time, remove the battery to remove risk of damage
- Do not install behind or within a metal object.
- For use indoors and in dry locations only

Control Diagram

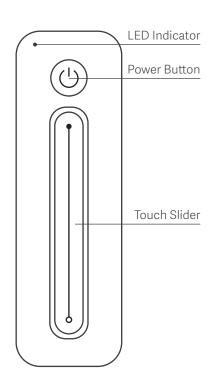

| DIM (1 Channel) | Short Press: ON/OFF |
|-----------------------|--|
| | |
| CCT (2 Channel) | Short Press: ON/OFF Long Press: 1-6s to adjust brightness |
| | |
| RGB (3 Channel) | Short Press: ON/OFF Long Press: 1-6s to adjust brightness Rapid Press 2 times for RGB White Color |
| | |
| RGBW (4 Channel) | Short Press: ON/OFF Long Press: 1-6s to adjust brightness Rapid Press 2 times to switch between RGB, White, and RGBW Modes |
| | |
| RGBCCT (5 Channel) | Short Press: ON/OFF Long Press: 1-6s to adjust brightness Rapid Press 2 times to switch between RGB and CCT control |

Mounting the Remote (3 Options)

Option 1: Mount the remote directly to a metal surface using the built-in magnets

Option 2: Screw the wall bracket onto a wall with two screws, then mount the remote to the wall bracket.

Option 3: Use the adhesive pad to adhere the wall bracket to a flat, clean surface, then mount the remote to the wall bracket.

Pairing the Remote Control

Use the Controller's Match Button

Match:

Short press the Match button on the controller, then immediately press the ON/OFF button on the remote. The LED will flash three times if the match is successful.

Delete:

Press and hold Match button for 5 seconds to delete all matched remotes. The LED will flash three times if the matched remotes were deleted.

Use Power Restart

Match:

Rapidly switch power to the Controller on and off two times.. Immediately short press the ON/OFF button. The light will blink 3 times if the match is successful.

Delete:

Rapidly switch power to the Controller on and off two times. Immediately short press the ON/OFF button 5 times on the remote. The light will blink three times if the matched remotes were deleted.

Vista reserves the right to modify this specification without prior notice.

