

# 4-Zone RF Remote

## Install Instructions


### For Your Safety:

- Disconnect power source before starting electrical work
- Read all safety notes before installing the product
- When installing or replacing battery, install in the correct orientation

### Precautions:

- If the remote will not be used for a long time, remove the battery to remove risk of damage
- Do not install behind or within a metal object.
- For use indoors and in dry locations only

### Control Diagram

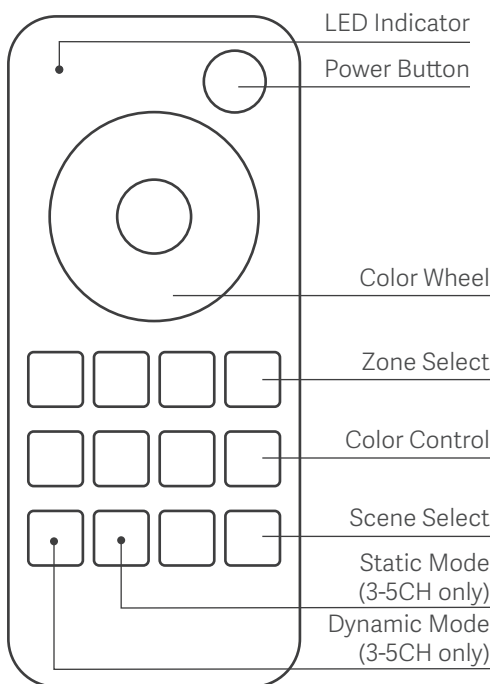

DIM  
(1 Channel)

**POWER** - Short Press: ON/OFF all zones  
**COLOR CONTROL** - 25%, 50%, 75%, 100% Brightness levels

CCT  
(2 Channel)

**POWER** - Short Press: ON/OFF all zones  
**COLOR CONTROL** - Short Press: direct select or increment color  
Long Press: continuous 256 level adjustment

RGBW  
(3/4 Channel)

**POWER** - Short Press: ON/OFF all zones  
**COLOR CONTROL** - Short Press: direct select or increment color  
Long Press: continuous 256 level adjustment  
RGB: Color Mode; W: White Mode

RGBCCT  
(5 Channel)

**POWER** - Short Press: ON/OFF all zones  
**COLOR CONTROL** - Short Press: direct select or increment color  
Long Press: continuous 256 level adjustment  
RGB: Color Mode; CCT: Temperature Mode

#### Common Controls

**COLOR WHEEL** - Touch to change brightness, color temperature, or color  
**ZONE SELECT** - Short Press: Selects zone and turns ON; Long Press: Zone OFF.  
Short press multiple zones in sequence to sync control across zones  
**SCENE SELECT** - Short Press: Recall scene; Long Press: Save current state into scene

### Mounting the Remote (3 Options)

**Option 1:** Mount the remote directly to a metal surface using the built-in magnets

**Option 2:** Screw the wall bracket onto a wall with two screws, then mount the remote to the wall bracket.

**Option 3:** Use the adhesive pad to adhere the wall bracket to a flat, clean surface, then mount the remote to the wall bracket.

### Pairing the Remote Control

#### Use the Controller's Match Button

Match:

- Short press the Match button on the controller, then immediately press the Zone button on the remote. The LED will flash three times if the match is successful.

Delete:

- Press and hold Match button for 5 seconds to delete all matched remotes. The LED will flash three times if the matched remotes were deleted.

#### Use Power Restart

Match:

- Rapidly switch power to the Controller on and off two times.. Immediately short press the Zone button. The light will blink 3 times if the match is successful.

Delete:

- Rapidly switch power to the Controller on and off two times. Immediately short press the Zone button 5 times on the remote. The light will blink three times if the matched remotes were deleted.

*Vista reserves the right to modify this specification without prior notice.*

